


750W Outdoor TWT Power Amplifier

for Troposcatter Applications or Tropo/Satellite Uplink Applications

Ku-Band

The VZU-6996V7

750 watt TWT Medium Power Amplifier
— high efficiency in an environmentally sealed compact package designed for outdoor operation

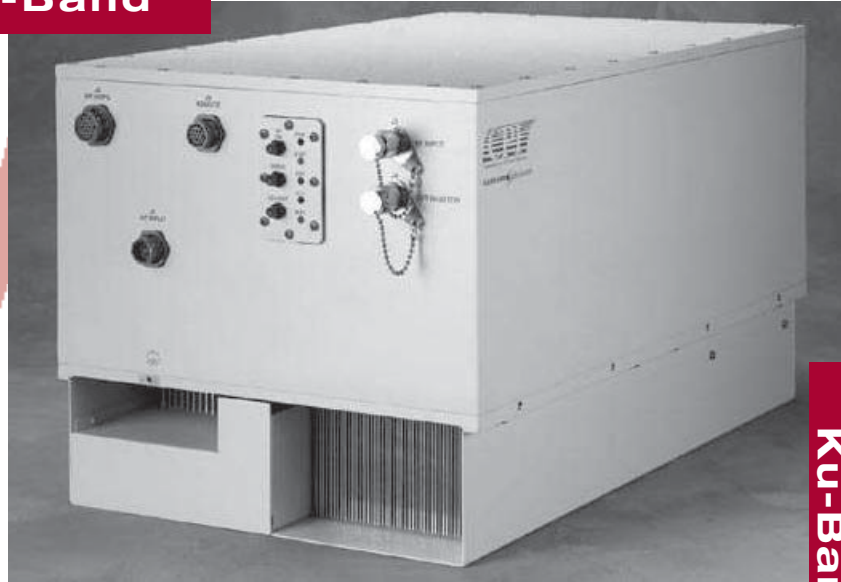

Plays in the Rain

Provides 750 watts of power in a rugged and compact weatherproof package, digital ready, for troposcatter communications in the 14.9 - 15.35 GHz frequency band. Wideband satellite uplink capability in the 13.75 - 14.5 GHz frequency range can be added as an option.

Cost Effective and Efficient

Mounting at the antenna improves performance through minimized cable losses and saves cost in system design. Employs a high efficiency, dual-depressed collector helix traveling wave tube, reducing operating costs.

Reliable

Designed and built to survive in extremely adverse environmental conditions and features increased cooling margin for longer life. Operating temperature of up to 60°C, including solar loading.

Simple to Operate

User-friendly microprocessor-controlled logic with integrated RS422/485 computer interface. Digital metering and pin diode attenuation for improved intermodulation performance. An Ethernet option with simple web browser interface is also available.

Easy to Maintain

Modular design and built-in fault diagnostic capability via remote monitor and control.

Global Applications

Meets International Safety Standard EN-60215, Electromagnetic Compatibility 2004/108/EC and Harmonic Standard EN-61000-3-2 to satisfy worldwide requirements.

Worldwide Support

Backed by over three decades of satellite communications experience, and CPI's worldwide 24-hour customer support network that includes sixteen regional factory service centers.

satcom  **division**

811 Hansen Way
P.O. Box 51625, Palo Alto, CA 94303

tel: +1 (650) 846-3803
fax: +1 (650) 424-1744

e-mail: marketing@satcom.cpii.com
www.cpii.com/satcom

Ku-Band

750W Outdoor TWT Power Amplifier

SPECIFICATIONS, VZU-6996V7

Electrical

Frequency	14.9 to 15.35 GHz (13.75 - 14.50 GHz satellite uplink frequency optional)
Output Power	
TWT	750 W min. (58.8 dBm)
Flange	650 W min. (58.1 dBm)
Bandwidth	450 MHz (750 MHz in optional satellite uplink mode)
Gain	73 dB min. at rated power 78 dB min. at small signal
RF Level Adjust Range	0 to 30 dB typ.
Gain Stability	
At constant drive & temp.	±0.25 dB/24hr max. (after 30 min. warmup)
Over temp., constant drive	±1.0 dB over oper. temp. range (typical)
Small Signal Gain Slope	±0.02 dB/MHz max.
Small Signal Gain Variation	
Across any 80 MHz band	1.0 dB pk-pk max. (1.5 dB pk-pk max. with BUC option)
Across the 450 MHz band (14.9 - 15.35 GHz)	4.5 dB pk-pk max.
Across the 750 MHz band (optional satellite uplink mode) (13.75 - 14.50 GHz)	3.5 dB pk-pk max. (4.5 dB with optional linearizer)
Input VSWR	1.5:1 max.
Output VSWR	1.5:1 max.
Load VSWR	
Continuous operation	2.0:1
Full spec compliance	1.2:1
Operation without damage	Any value
Residual AM, max.	-50 dBc below 10 kHz -20 [1.5 +log F(kHz)] dBc, 10 kHz to 500 kHz -85 dBc above 500 kHz
Phase Noise	
IESS Phase Noise Profile	6 dB below mask
AC fundamentals	-36 dBc (IESS-308 by 6dB)
Sum of spurs (370 Hz to 1 MHz)	-47 dBc
AM/PM Conversion	2.5°/dB max. for a single-carrier at 8 dB below rated power (at 3 dB with optional linearizer)
Harmonic Output	-60 dBc at rated power, second and third harmonics
Noise and Spurious	<-130 dBW/4 kHz, below 12.75 GHz <-65 dBW/4 kHz, 13.75 - 15.5 GHz

Electrical (continued)

Intermodulation (13.75 - 14.5 GHz)	-24 dBc or better with two equal carriers at total output power level 7 dB below rated single carrier output (at 3 dB below with optional linearizer)
Group Delay (in any 80 MHz band)	0.01 ns/MHz linear max; 0.001 ns/MHz sq. parabolic max; 0.5 ns pk-pk ripple max. (1.5 ns pk-pk ripple max. with BUC option)
Primary Power	
Voltage	Single phase, 200-240 VAC ±10%
Frequency	47-63 Hz
Power Consumption	2.3 kVA typ. 2.5 kVA max.
Power Factor	0.95 min.
Inrush Current	200% max.

Environmental (Operating)

Ambient Temperature	-40°C to +60°C operating, including solar loading; -40°C to +70°C non-operating
Relative Humidity	100% condensing
Altitude	10,000 ft. with standard adiabatic derating of 2°C/1000 ft., operating; 50,000 ft., non-operating
Shock and Vibration	20 G peak, 11 msec, 1/2 sine; 2.1 G rms, 5 to 500 Hz.
Acoustic Noise	68 dBA (as measured at 3 ft.)
Heat Dissipation	2000 W max.

Mechanical

Cooling (TWT)	Forced air with integral blower
RF Input Connection	Type N Female
RF Output Connection	WR-62 waveguide flange, grooved, threaded UNC 2B 6-32
RF Output Monitor	Type N female
Dimensions (W x H x D)	14.5 x 13.1 x 24 in. (368 x 333 x 610 mm)
Weight	95 lbs (43.1 kg) typ.

OPTIONS:

- *1 RU Remote Control Panel*
- *Ethernet Interface*
- *Redundant and Hybrid Power Combined Systems*
- *Integrated 1:1 Switch Control and Drive*
- *Integral L-Band Block Up Converter (BUC)*
- *Satellite Uplink Capability in the 13.75 - 14.50 GHz frequency range.*

SATELLITE UPLINK OPTIONS:

- *Integral Linearizer*
- *External Receive Band Reject Filter (Increases loss by a minimum of 60 dB up to 12.7 GHz)*
- *Integral L-Band Block Up Converter (BUC)*



Communications & Power Industries



For more detailed information, please refer to the corresponding CPI Technical Description.

Note: Specifications may change without notice as a result of additional data or product refinement.

Please contact CPI before using this information for system design.